



Step 1

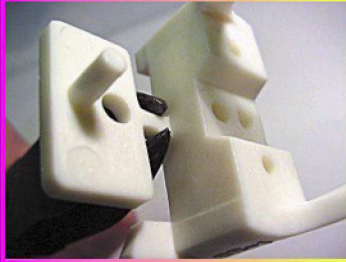

Step 2



Step 3

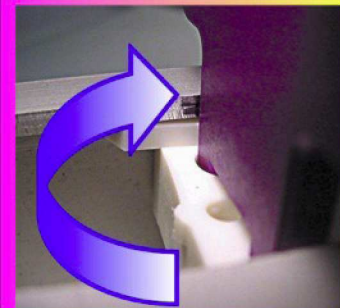

Storefront Door Starter Kit

Instructions

- Step 1: Separate spacer from bridge and clean up edges.
 - Step 2: Insert the SK1 spanner key into bridge.
 - Step 3: Push bridge with spanner key into the aluminum door stile and turn clockwise 90 degrees into position and remove key.
- Optional: Insert two #6 x 1 1/2" screws into each bridge using the same holes that were used with the spanner key.
- Step 4: Insert lock into door using two #8 x 5/8" pan head screws (provided) - complete lock installation with cylinders and lock's faceplate.

Contents

4 Bridges, 8 Shims, 8 #6x1 1/2" pan head screws, 4 #8x5/8" pan head screws, 1 #SK1 Spanner Key

TIP!

If the bridge is not fitting well into a narrow stile, try shaving down the feet of the bridge.

Optional

